 
 


FUARO R6 (Перфоключ)

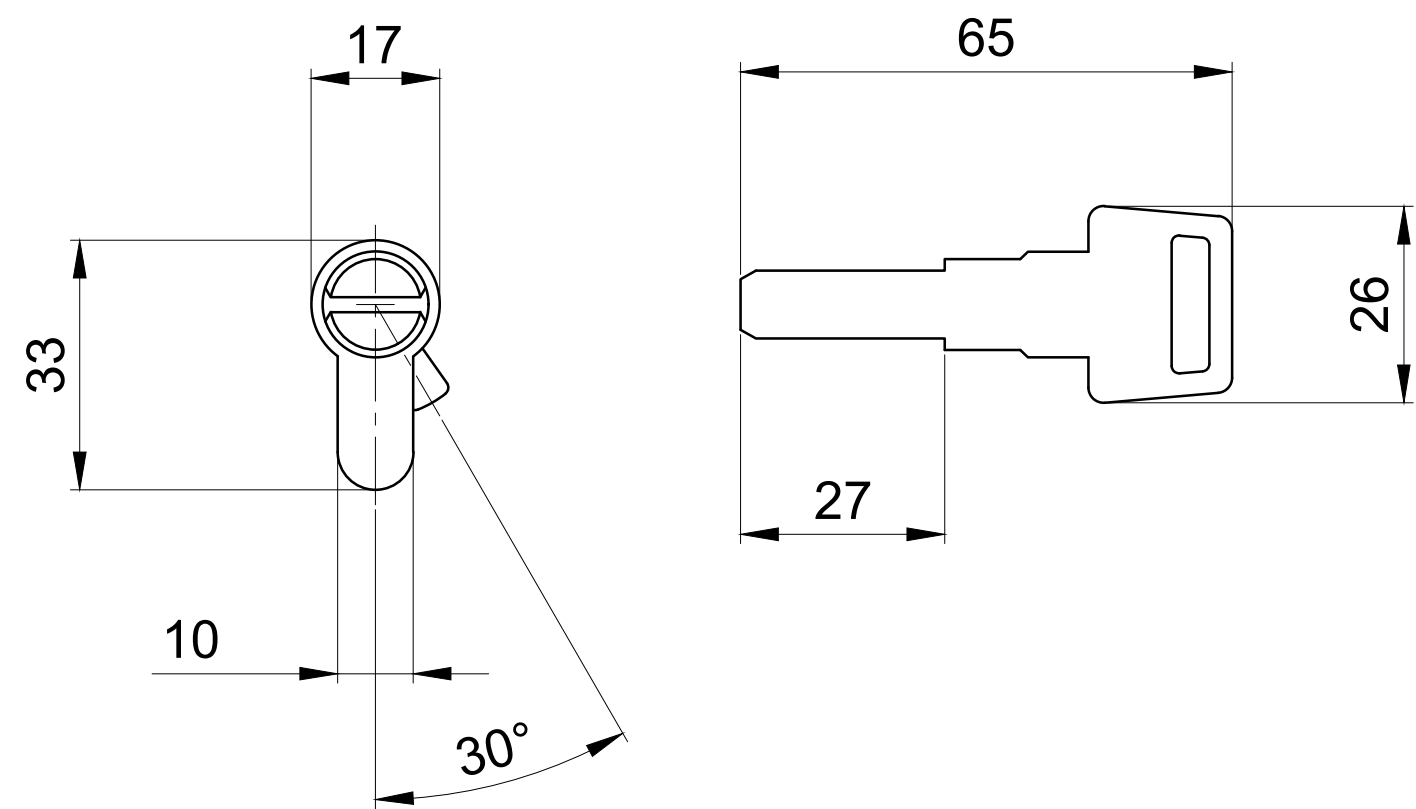 


FUARO R600 ключ-ключ

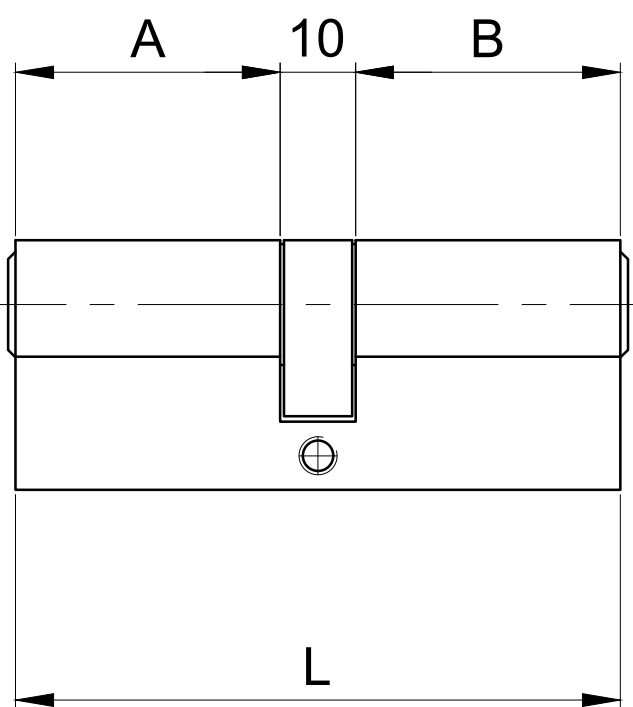

Обозначение	Размеры, мм	
	A	B
R600/60 mm (25+10+25)	25	25
R600/68 mm (26+10+32)	26	32
R600/70 mm (25+10+35)	25	35
R600/70 mm (30+10+30)	30	30
R600/80 mm (30+10+40)	30	40
R600/80 mm (35+10+35)	35	35
R600/90 mm (30+10+50)	30	50
R600/90 mm (40+10+40)	40	40
R600/100 mm (45+10+45)	45	45

FUARO R602 ключ-вертушка

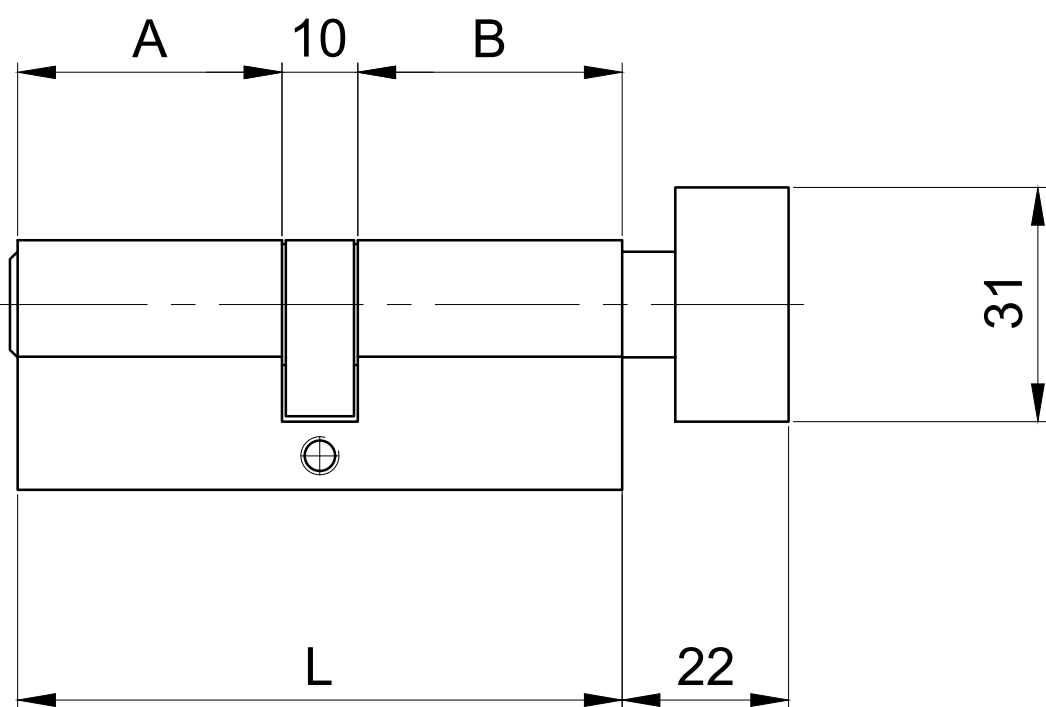

Обозначение	Размеры, мм	
	A	B
R602/60 mm (25+10+25)	25	25
R602/68 mm (26+10+32)	26	32
R602/70 mm (30+10+30)	30	30
R602/80 mm (30+10+40)	30	40
R602/80 mm (35+10+35)	35	35
R602/80 mm (40+10+30)	40	30
R602/90 mm (35+10+45)	35	45
R602/90 mm (40+10+40)	40	40
R602/90 mm (45+10+35)	45	35
R602/100 mm (45+10+45)	45	45